


T-REX DINOZORD



BUILDING INSTRUCTIONS

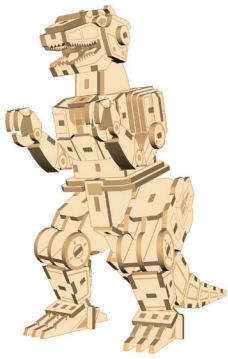

READ BEFORE ASSEMBLING:

- Go through the instructions one step at a time.
- Don't punch out all of the pre-cut parts at once.
- Plywood thickness and color may vary.
- While not necessary, glue may be applied if desired.
- If you have trouble punching out the small pieces from the board, use tweezers or a toothpick to help.
- Adult supervision recommended.

WARNING: CHOKING HAZARD - CONTAINS SMALL PARTS. NOT FOR CHILDREN UNDER 3 YRS.

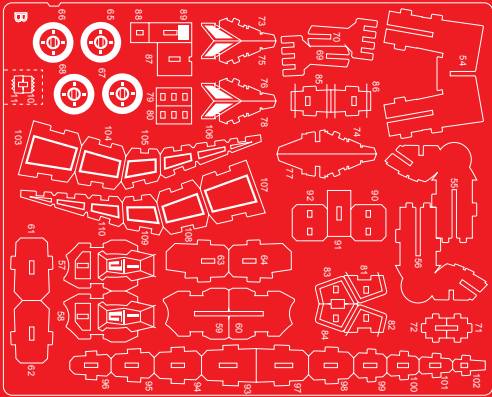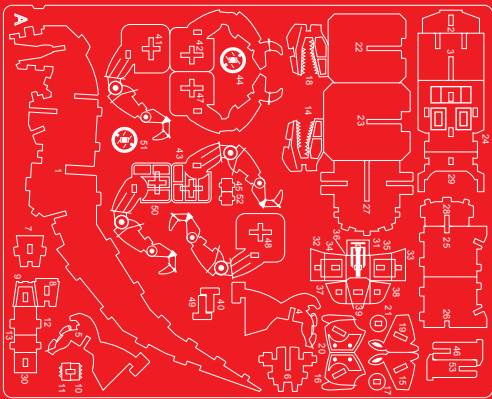

Manufactured in Shaogun, China 3307017

TM & © 2007 S&G POWER RANGERS LLC. ALL RIGHTS RESERVED. POWER RANGERS AND ALL RELATED LOGOS, CHARACTERS, NAMES, AND DISTINCTIVE LIKENESSES THEREOF ARE THE EXCLUSIVE PROPERTY OF S&G POWER RANGERS LLC. ALL RIGHTS RESERVED. USED UNDER AUTHORIZATION.

MAKE IT YOUR OWN

Before you start building and decorating your model, make a plan. Do you want to make an exact replica of the T-Rex Dinozord or create something of your own design? Anything goes!

PLAN

For this project, you will want to assemble the full model before beginning to craft.

TECHNIQUE

Use a fine paintbrush and take your time, especially for the smaller engraved details.




PROCESS

Start by painting the metal details of your Dinozord with silver paint. Then use yellow and black paint for the remaining details before painting the rest of the model a bright red. Add the finishing touch to this model by painting the eyes light blue.



1

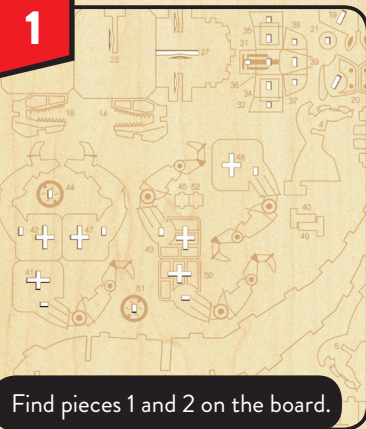


Find pieces 1 and 2 on the board.

2

Pop out only these puzzle pieces from the board.




3

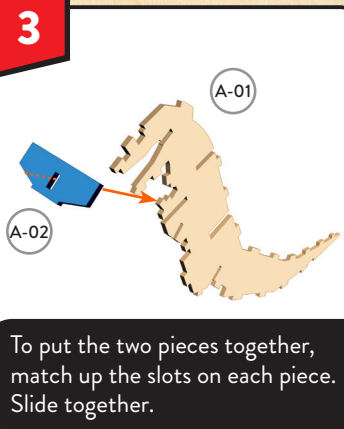


To put the two pieces together, match up the slots on each piece. Slide together.

4

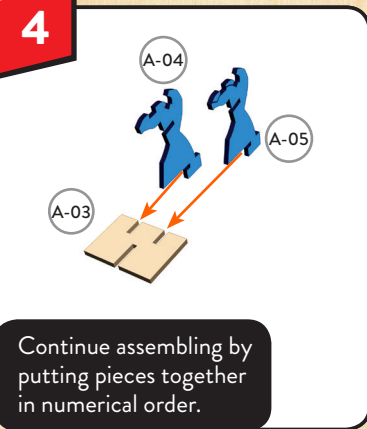


Continue assembling by putting pieces together in numerical order.


5

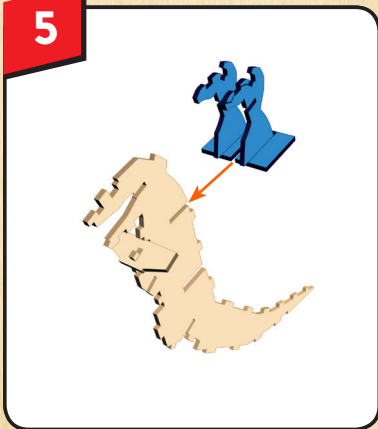


6

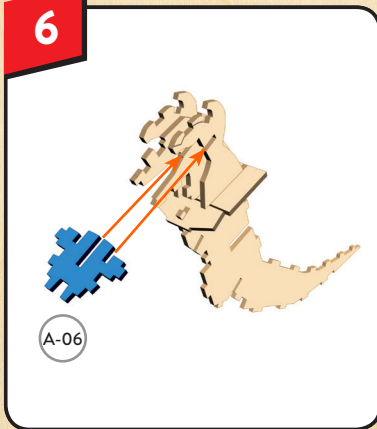


7

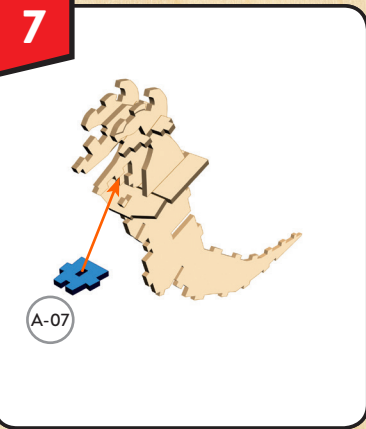


8

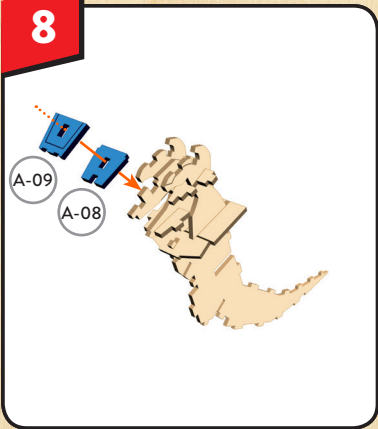


9

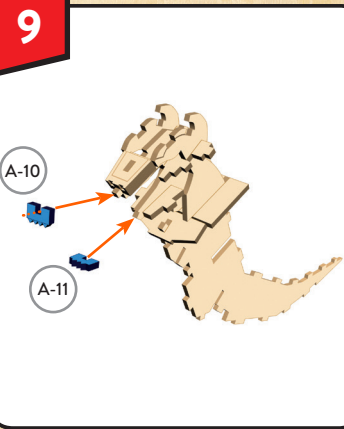


10

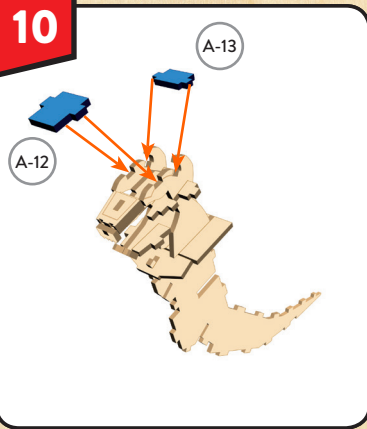


11

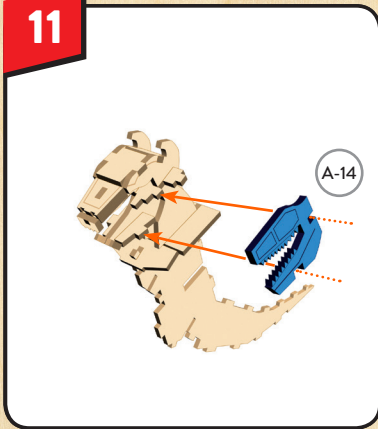


12

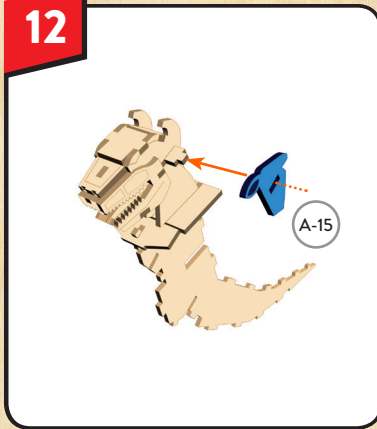


13

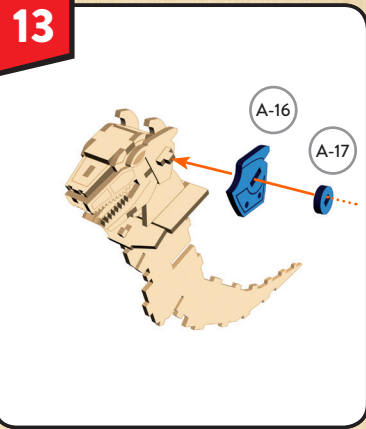


14

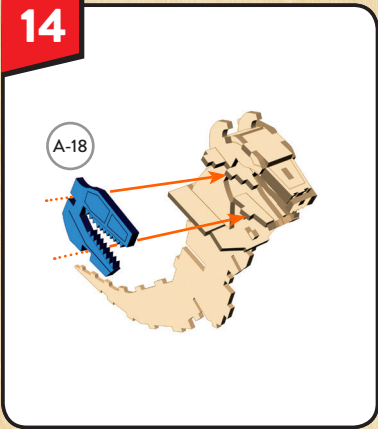


15

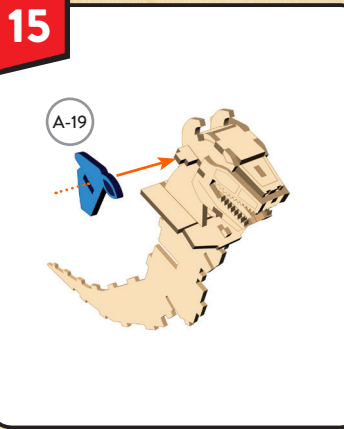

16

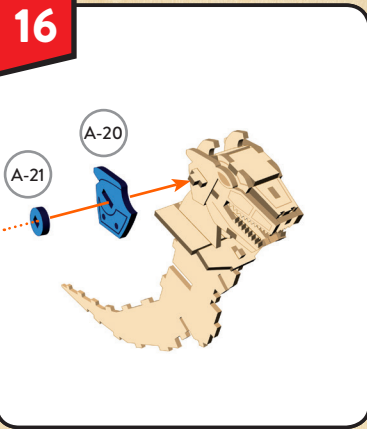


17

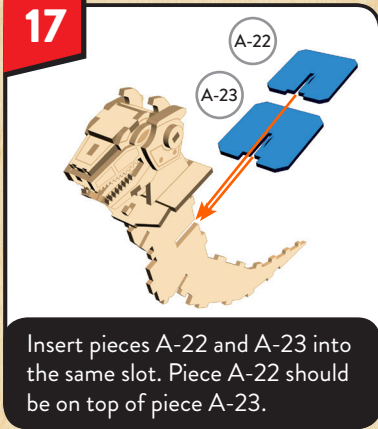


Insert pieces A-22 and A-23 into the same slot. Piece A-22 should be on top of piece A-23.


18

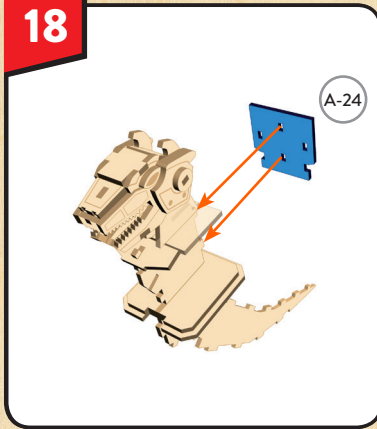


19

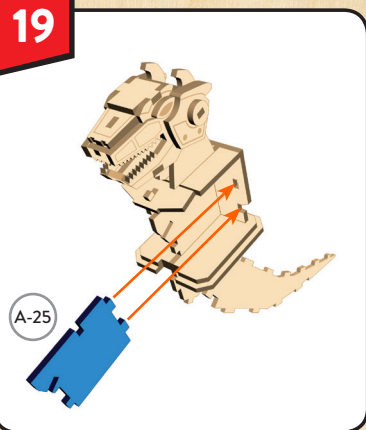


20

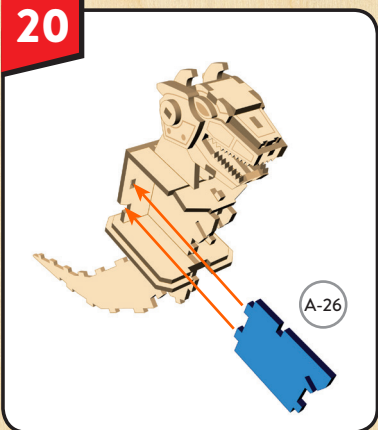


21

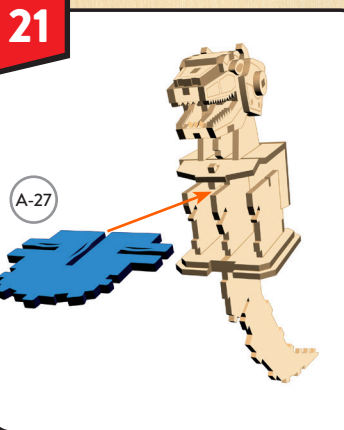


22

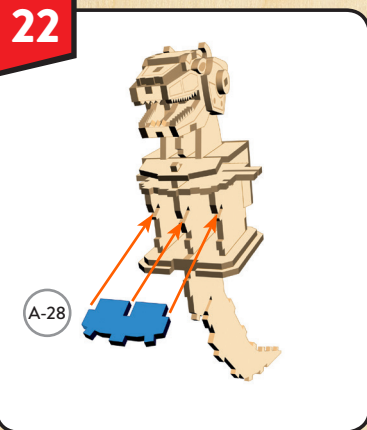


23

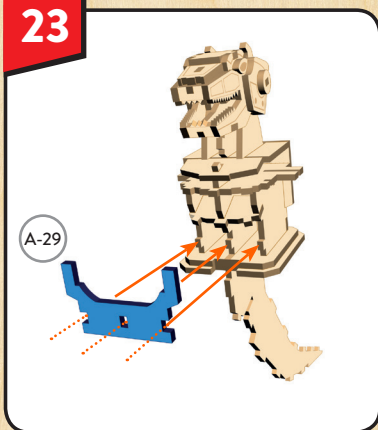


24

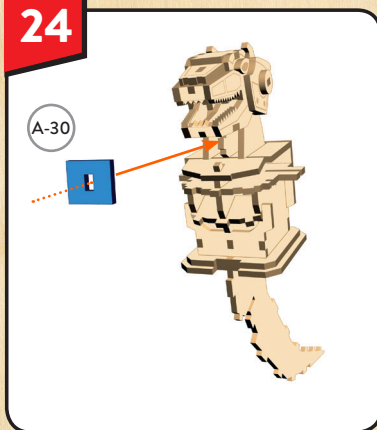

25

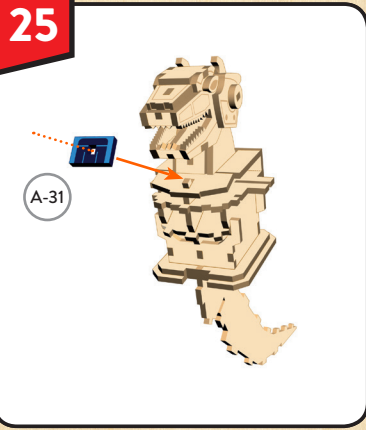


26

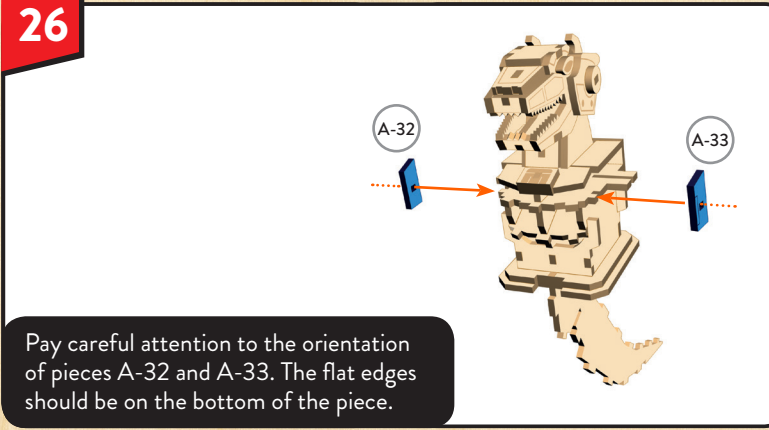


Pay careful attention to the orientation of pieces A-32 and A-33. The flat edges should be on the bottom of the piece.


27

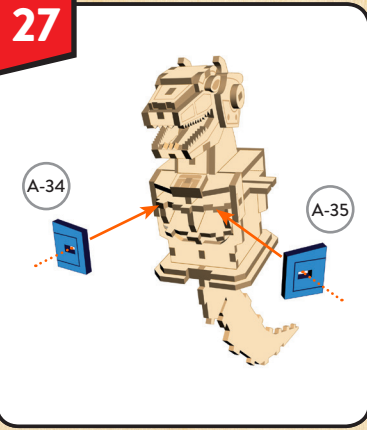


28

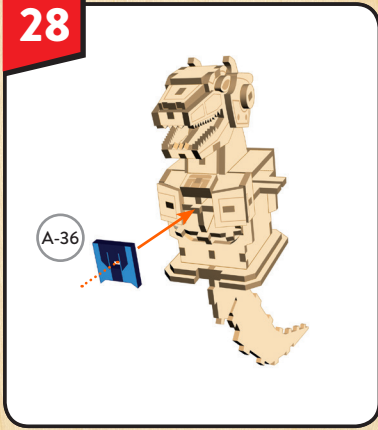


29

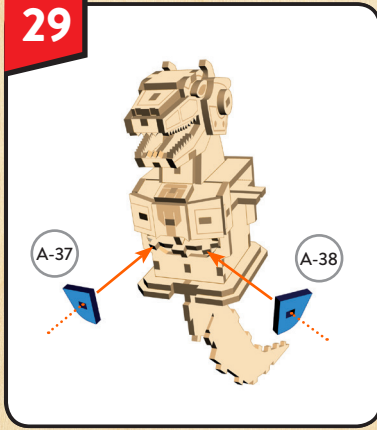


30

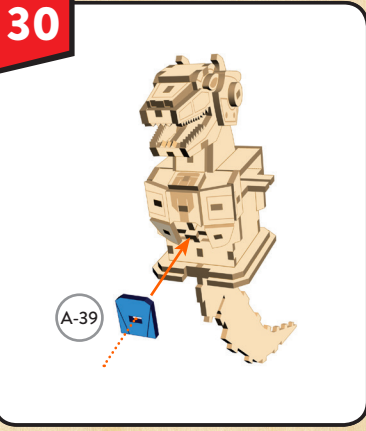


31

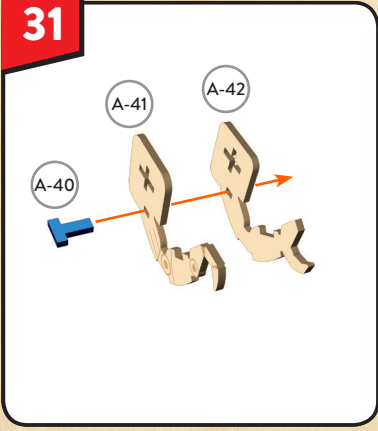


32

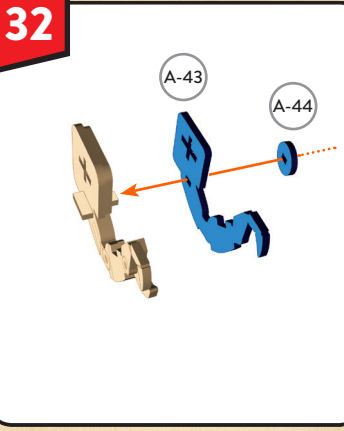

33

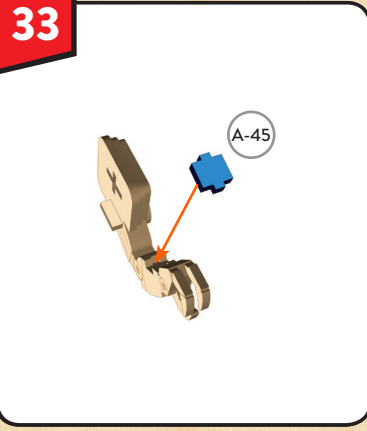

34

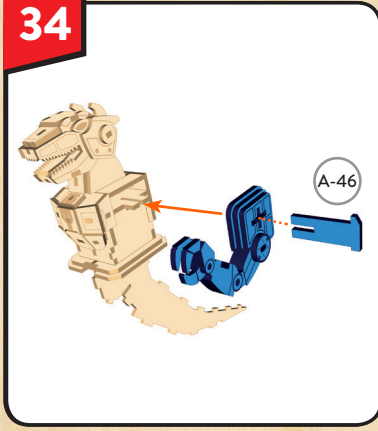

35

